


SET UP INSTRUCTION

①




Slide the black band off. (Store the band somewhere you will remember. You will need the band when folding the tent later).

②

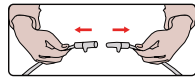


Unclip each of the connectors at the ends of the elastic poles (totally 3 poles). Hold two connectors in a straight line for easy unclip. Be cautious to avoid the poles come out from the connectors.

③

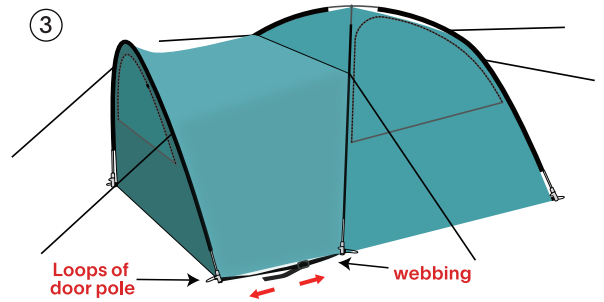

Put the tent inside the truck bay. Adjust length of the webbing on each side based on your truck bed length. Fix the length by ropes tied on the loops on two ends of door pole. Use the guylines to fix the tent with the truck or on the ground.

⑤

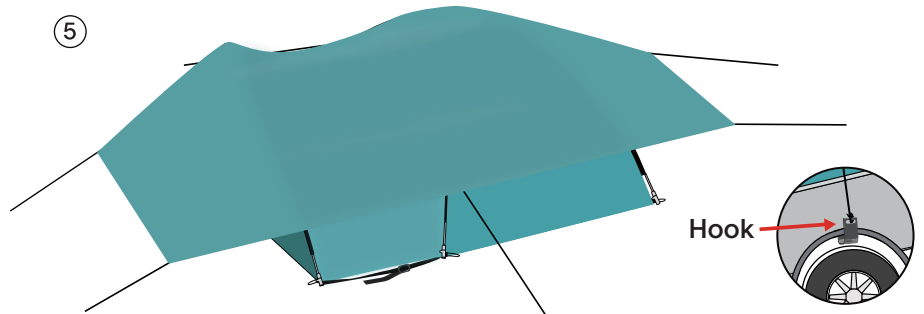

Fix the top cover with ropes and stakes with the truck or the ground, to get waterproof in rainy days. Be sure to overlap cover the truck panels all around.




Tie down guylines with hooks on to the car as needed. 6 plastic hooks are paint-protective.



Adjust the position of 2 velcros inside to hold the extra fabric on the top of the door, Which caused by the truck bed adjusted.


TAKE DOWN INSTRUCTION

①

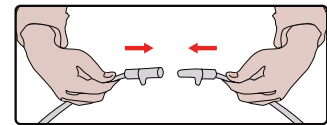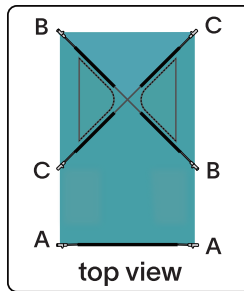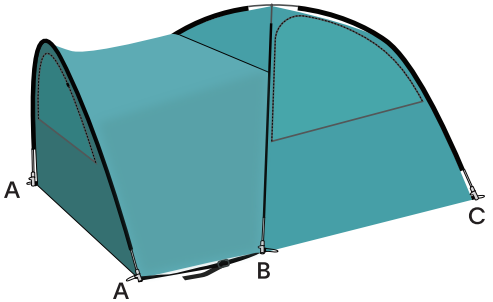


Clip each of the connectors at the ends of each pole (A-A, B-B, C-C) to become three circles. Be sure to FULLY insert two connectors to prevent loosening.

②

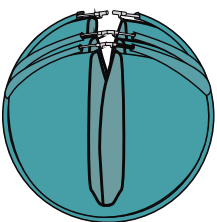


Place the three circles flat.

③

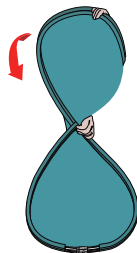

Twist it into an 8 shape.

④

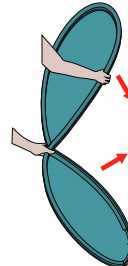

Fold the two smaller circles together.

⑤



Slide the band around the tent to hold in place for storage.